

ADMINISTRATOR ENROLMENT

Upper button 3 s

Blue LED is flashing fast.

CHOOSE THE RELAY:
Relay 1: upper button 2 s
Relay 2: lower button 2 s
Relay 1+2: L+R button 2 s

Green LED + buzz 1 s

Blue LED is flashing.

Administrator finger 7-10 s

Green LED + buzz 1 s
Finger is stored.

Repeat the procedure 3 times!!!
It is recommended to update the administrators and users list.

POWER MODE SELECTION

Upper button 20 s

Hold the button until green LED starts flashing.

Power save mode:
both buttons 2 s

Green LED
+ buzz 3 x 1 s
Power saving on.

USER FINGER ENROLLMENT

Upper button 3 s

Blue LED is flashing.

Administrator finger 1 x

Blue LED is flashing fast.

CHOOSE THE RELAY:
Relay 1: upper button 2 s
Relay 2: lower button 2 s
Relay 1+2: L+R button 2 s

Green LED + buzz 1 s

Blue + green LED are
flashing alternately.

User finger 7-10 s

Green LED + buzz 1 s
Finger is stored.

It is recommended to
update the administrators
and users list.

Constant power mode:
lower button 2 s

Green LED
+ buzz 1 x 1 s
Constant power on.

DELETING A USER FINGER

CHECK THE LIST

Lower button 5 s

Blue LED is flashing.

Administrator finger 1 x

Green LED + buzz 1 s

Green + red LED are flashing
alternately.

User finger 1 x
(deleting selection)

Green + red LED
+ buzz 3 x 1 s
User finger
was deleted.

Only one user fingerprint
can be deleted at the time.
If a user has more than one
finger enrolled, each finger
must be deleted separately.
Check the administrators
and users list.

DELETE ALL

Both buttons 10 s

Blue + red LED are flashing
alternately.

Administrator finger 1 x

Green LED + buzz 1 s

Blue + red LED are flashing
alternately.

Administrator finger 1 x

Blue + red LED
+ buzz 5 x 1 s
Fingerprint database was
deleted.

All fingerprints were delet-
ed, including the adminis-
trators. It is recommended
to immediately enrol 3 new
administrators.